



ENZYMATIC STYLUS CLEANER

Thank you for your purchase of Sierra Sound's Enzymatic Stylus Cleaner. This completely alcohol-free formula is safe for daily use as well as for deep cleaning and the removal of built-up dirt and grime from your phonograph stylus. By avoiding the use of alcohol, the critical adhesive which bonds your stylus to the cantilever is protected from degradation over time, improving both the sound quality and life-span of your phono cartridge.



ENZYMATIC STYLUS CLEANER

Thank you for your purchase of Sierra Sound's Enzymatic Stylus Cleaner. This completely alcohol-free formula is safe for daily use as well as for deep cleaning and the removal of built-up dirt and grime from your phonograph stylus. By avoiding the use of alcohol, the critical adhesive which bonds your stylus to the cantilever is protected from degradation over time, improving both the sound quality and life-span of your phono cartridge.

Instructions for use:

Use the built-in cap brush to apply a small quantity of fluid onto your stylus. Do not over-saturate the brush! When removing the brush from the bottle, dab the bristles against the top of the bottle to remove any excess fluid. The brush should be damp, but not dripping.

Apply gentle pressure to the bottom of your stylus (needle) and brush in the direction of record movement- back to front only. For light cleaning in between records or listening sessions, only 1 or 2 brief brush strokes are needed.

For occasional deep cleaning of built-up grime, let the damp brush rest against the stylus for 5 seconds to loosen the dirt, then apply 5-6 brush strokes and repeat as needed.

Instructions for use:

Use the built-in cap brush to apply a small quantity of fluid onto your stylus. Do not over-saturate the brush! When removing the brush from the bottle, dab the bristles against the top of the bottle to remove any excess fluid. The brush should be damp, but not dripping.

Apply gentle pressure to the bottom of your stylus (needle) and brush in the direction of record movement- back to front only. For light cleaning in between records or listening sessions, only 1 or 2 brief brush strokes are needed.

For occasional deep cleaning of built-up grime, let the damp brush rest against the stylus for 5 seconds to loosen the dirt, then apply 5-6 brush strokes and repeat as needed.

Storage and replacement:

To maximize the lifespan of your cleaning fluid, store the bottle away from direct sunlight. When placing the brush back into the liquid after cleaning, wipe away any excess dirt or dust that may be stuck to it using a soft cloth or paper towel. If the fluid becomes cloudy over time after frequent use it is time to replace it. Please note since this is an alcohol free product, it will not evaporate as fast as other products, and as such it will need to be replaced before it completely runs out.

Sierra Sound LLC
PO Box 510
Wilton, CA 95693
www.sierrasound.net

Storage and replacement:

To maximize the lifespan of your cleaning fluid, store the bottle away from direct sunlight. When placing the brush back into the liquid after cleaning, wipe away any excess dirt or dust that may be stuck to it using a soft cloth or paper towel. If the fluid becomes cloudy over time after frequent use it is time to replace it. Please note since this is an alcohol free product, it will not evaporate as fast as other products, and as such it will need to be replaced before it completely runs out.

Sierra Sound LLC
PO Box 510
Wilton, CA 95693
www.sierrasound.net